



Instructions for the use of the BABY MOVER® from Baby-Mover B.V.

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

WARNING :

- Your balance may be adversely affect by your movement and that of the child(ren)
- Take care when bending or leaning forward or sideways;
- This carrier is not suitable for use during sporting activities.

Use only for its intended purpose:

The BABY MOVER® is a professional evacuation apron intended for the emergency removal of babies or infants to a place of safety. In case of fire or other emergencies, up to 3 babies or infants with a weight from 2kg (4,4 lb) up to a maximum of 9kg (20 lb) per child can be evacuated from buildings or other structures. The BABY MOVER® is neither intended nor suitable for any other purpose than that described here.

Instructions for use:

A. Preparation :

- Remove the BABY MOVER® from its packaging and hang it up at a known place that is quickly and easily accessible in case of emergency
- Protect the BABY MOVER® against moisture, heat, strong sunlight and ensure that the pockets remain empty. This will prolong the life of the product.
- Keep the BABY MOVER® out of reach of children and animals
- Baby-Mover B.V. accepts no liability for damage caused by improper use of the BABY MOVER® or use of the BABY MOVER® for any purpose other than that for which it is intended.
- As the BABY MOVER® may be used monthly at evacuation drills, some signs of wear and tear may appear after a few years. Therefore, check regularly that the BABY MOVER® has no defects or excessive wear.
- Report any defect without delay to Baby-Mover B.V. and never try to repair it yourself!
- If possible, practice the scenario described in section B at least once a month

B. If evacuation becomes necessary:

- The rescuer first places her/his head and arms through the holes in the BABY MOVER®, with the pockets to the front. Place the babies in the carrying pockets as detailed below. Try to evenly distribute the weight over the three pockets.
- Place the baby upright in the carrying pocket, with its face towards the person wearing the BABY MOVER®. It is not absolutely necessary having the child's legs going through the holes in the bottom of the pocket but doing so makes it more comfortable for a larger child.
- Never close the carrying pocket completely with a child inside, because of the risk of suffocation.
- The BABY MOVER® is made from fire resistant material. Therefore flammable material should as little as possible be allowed either on the BABY MOVER® or in the carrying pockets.
- Pay full attention to the children whilst they are being carried.

- Do not use (hot) drinks or food while carrying children.

Washing instructions:



Guarantee:

Baby-Mover B.V. guarantees the proper function of the BABY MOVER® and the suitability of the materials used for a period of five years from the date of sale. The BABY MOVER® is manufactured with great care. Both the materials and the construction have been extensively tested for their quality and suitability. The warranty is valid only if the instructions for use shown above are observed. In case of defects Baby-Mover B.V. has the right to take the decision whether to repair the BABY-MOVER®, replace it, or to repay the purchase price. Complaints regarding any deficiencies must be reported in writing by post to Baby-Mover B.V. within 5 working days after discovery, the affected BABY MOVER® must accompany the letter.

The warranty will be forfeited in cases of improper or inappropriate usage. The warranty is also forfeited if modifications and repairs to the BABY MOVER® are carried out by persons other than staff of Baby-Mover B.V.

Liability

Baby-Mover B.V. shall not be liable for damage resulting from improper use of the BABY MOVER® or use of the BABY MOVER® for any purpose for which it is not intended.

Baby-Mover B.V. shall not be liable for visible defects, which have not been reported to the company in due time.

Manufacturer:

