



Assembly instruction

Cover K

Part No: 901500

Delivery includes

- 1x GfS Exit Cover K
- 2x mounting brackets
- 3x end caps
- 2x green under plates
- 6x red upper plates
- 1x picto
- 4x screws

First, you need to determine where to fix the **GfS Exit Cover K** on the door. When putting the GfS Exit Cover over the door handle it becomes clear where there is enough space to fix the mounting brackets on the door (drawing: options 1–4). In these positions the mounting brackets are pressed into the opening of the GfS Exit Cover K. The end caps are clicked into all other holes, which are not used for the mounting.

The mounting brackets might be installed in three different positions: When selecting the first or second option, the GfS Exit Cover K is not sitting directly on the door (at uneven surfaces highly recommended).

With the third option the GfS Exit Cover K sits directly on the door. To do this, take a pointed object (e.g. pen, screwdriver, scissors), press the fixing latch so far out of the square-end and the mounting bracket so deep into the GfS Exit Cover K that it snaps into the lower square-end.

The GfS Exit Cover Type K is used to secure door handles. The cover is made out of the transparent and unbreakable material Makrolon. In case of an emergency the cover can be lifted by force. The pins of the patented red clips break and the cover falls down. The cover can be reused only the red upper plates have to be replaced.

1. Mount the two green under plates with the accompanying screws on the door.
2. Fix one red upper plate onto the lower green under plate. Insert the GfS Exit Cover K and fix the second red upper plate with the upper fastening lug onto the upper green under plate.
3. Glue the provided pictogram on the GfS Exit Cover K.

