


QUICK START GUIDE

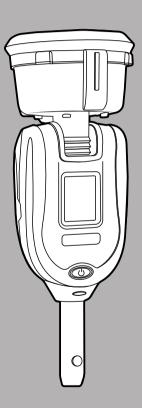












WWW.acornfiresecurity.com

// CHARGING THE BATTERY


The battery is charged by placing the battery pack into the charge cradle and connecting to a power source using the supplied mains adaptor.

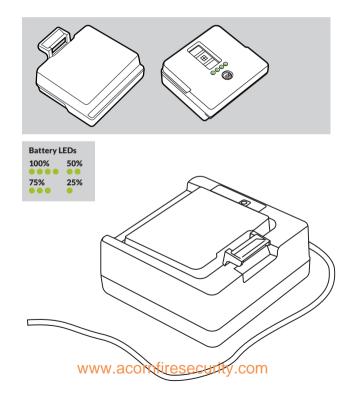


// INSTALLING THE GENERATOR

Take care not to touch exposed electrical contacts when installing product components. Ensure all components are securely fitted.

- Ensure unit is switched off and open the back cover
- Insert the generator firmly, engaging clips 1 and 2

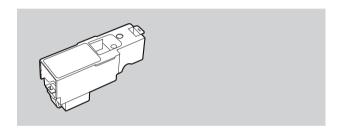


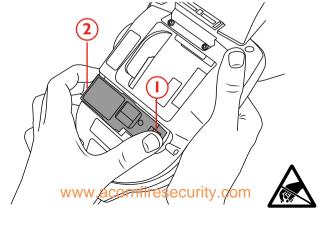

// INSTALLING THE SMOKE CARTRIDGE

Slide the smoke cartridge completely into the smoke generator housing following the guide rails.

Note: Do not insert the smoke cartridge until the generator has been fully fitted.

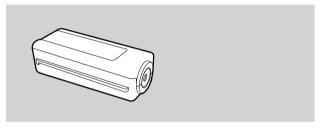







// INSTALLING THE BATTERY

Clip the battery into place.

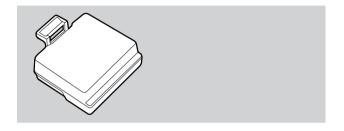

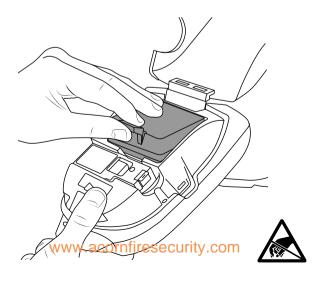

www.acornfiresecurity.com PRODUCT REGISTRATION >

// GETTING STARTED WITH DETECTORTESTERS CONNECT

STEP 1

Visit https://detectortesters-connect.com to create your account.

STEP 2

Sign into the Cloud Portal to register your device and purchase your subscription.



www.acornfiresecurity.com

STEP 3

Download the Detectortesters Connect app for your smartphone device from the App Store or Google Play Store. The following smartphones are supported:

- Apple iPhone with iOS 12 or later
- Android OS 8 or later

Get the Detectortesters Connect App





For help with Detectortesters Connect, including the App, Cloud Portal and subscriptions, scan the QR code:



www.acornfiresecurity.com

// USING THE CLOUD PORTAL

The Cloud Portal can be accessed by all users with admin privileges and enables users to:

- View, download and send test reports in PDF or CSV format
- Register new devices and purchase new subscriptions
- Register new technicians or back-office staff to your company



www.acornfiresecurity.com

Download the full user manual by scanning the QR code.



ICONS & LED INDICATOR REFERENCE CHAITYSCOM

LCD DISPLAY ICONS

Testifire XTR2 displays the following icons on the LCD display:



BATTERY STATUS ICON



CARTRIDGE STATUS ICON



GENERATOR STATUS ICON



BLUETOOTH CONNECTION



SOLID ALARM DETECTION



BLINKING ALARM DETECTION

STATUS INDICATOR LEDS

Testifire XTR2 indicates events as follows:

WHEN IDLE



SOLID BLUE SMOKE TEST



SOLID RED HEAT TEST



ALTERNATE SOLID RED/BLUE





SOLID ORANGE DELAYED START





SOLID PURPLE

SYSTEM FAULT

WHEN ACTIVE



FLASHING BLUE SMOKE TEST ACTIVE



FLASHING RED
HEAT TEST ACTIVE



FLASHING ALT RED/BLUE COMBINED TEST ACTIVE



FLASHING ORANGE DELAYED START ACTIVE



FLASHING WHITE

CLEARING ACTIVE



TRIPLE FLASHING GREEN

PASSED TEST RESULT



TRIPLE FLASHING RED FAILED TEST RESULT

www.acornfiresecurity.comvithus





